


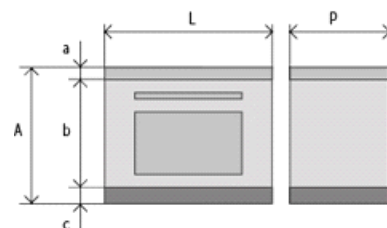

Model	<b>E60F - Wood Cooker</b>
Flue Exit	<b>ABOVE RIGHT</b>
Type Of Cookingplate	<b>CAST-IRON</b>
Top Plate	<b>SQUARED H=40 mm backsplash h50x20mm</b>
Finishing	<b>STANDARD</b>
Colour	<b>STAINLESS STEEL</b>
Doors	<b>BLACK DOORS ECO</b>
Handles	<b>S.STEEL HANDLES D3</b>
Base	<b>S. STEEL BASE H=30 mm</b>

L) <b>Width:</b>	<b>600 mm</b>
P) <b>Depth:</b>	<b>600 mm</b>
A) <b>Height:</b>	<b>860 mm</b>

a) Top plate:	40 mm
b) Body:	790 mm
c) Plinth:	30 mm



write here the code to modify the configuration

21402778198

